




ETI PRODUCTS - TEMPLATE GUIDE

IC CORE KEY SWITCH DEPTH & SPACING PANEL MOUNT - JULY 2025


BEST (ICES67)		MEDECO (ICME05)	
A1, A2, AW1, AW2, B1, B2, B4	Faceplate 1-13/16" Depth Clearance Panel 2" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
AJ1, AWJ1, AWJ2	Faceplate 1-13/16" Depth Clearance Panel 2" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
D2, E2, F2, K4, L2	Faceplate 1-13/16" Depth Clearance Panel 2" Depth Clearance	(FIXED Mounting Depth)	
J1, J2, J4	Faceplate 2-3/16" Depth Clearance Panel 2-3/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
T1, T2, T4	Faceplate 2-9/16" Depth Clearance Panel 2-3/4" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
B3, P4	Panel 2" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
R4	Panel 2-3/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
T3, W4	Panel 2-3/4" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	

IC CORE CYLINDER PREP
SINGLE ALL FORMATS

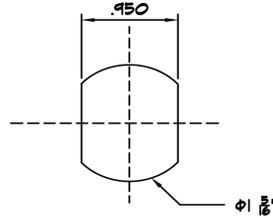


CORBIN (ICCO03)		SARGENT (ICSA02)	
A1, A2, AW1, AW2, B1, B2, B4	Faceplate 1-11/16" Depth Clearance Panel 1 13/16" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
AJ1, AWJ1, AWJ2	Faceplate 1-11/16" Depth Clearance Panel 2" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
D2, E2, F2, K4, L2	Faceplate 1-13/16" Depth Clearance Panel 2" Depth Clearance	(FIXED Mounting Depth)	
J1, J2, J4	Faceplate 2-1/16" Depth Clearance Panel 2-3/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
T1, T2, T4	Faceplate 2-7/16" Depth Clearance Panel 2-5/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
B3, P4	Panel 1 7/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
R4	Panel 2-1/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
T3, W4	Panel 2-5/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	

IC CORE PANEL MOUNT PREP
FORMATS: A1, AJ1, AW1, AWJ1, AWJ2, B2, B4, J1, J2, J4, T1, T2, T4

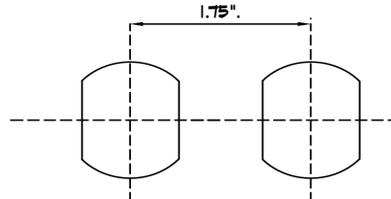

IC CORE PANEL MOUNT PREP
FORMATS: D2, L2, E2, F2, K4, B3, J3, T3

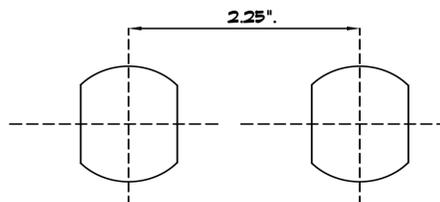

SCHLAGE (ICSC01)		YALE (ICYA04)	
A1, A2, AW1, AW2, B1, B2, B4	Faceplate 1-15/16" Depth Clearance Panel 2 1/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
AJ1, AWJ1, AWJ2	Faceplate 1-15/16" Depth Clearance Panel 2 1/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
D2, E2, F2, K4, L2	Panel 2" Depth Clearance	(FIXED Mounting Depth)	
J1, J2, J4	Faceplate 2-5/16" Depth Clearance Panel 2-1/2" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
T1, T2, T4	Faceplate 2-9/16" Depth Clearance Panel 2-7/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
B3, P4	Panel 2 1/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
R4	Panel 2-1/2" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	
T3, W4	Panel 2-7/8" Depth Clearance	(For Reduce Mounting Depth Use Mortise Cyl Collars Max 1/2")	

FORMATS: P4, R4, W4

